


CONTROLS

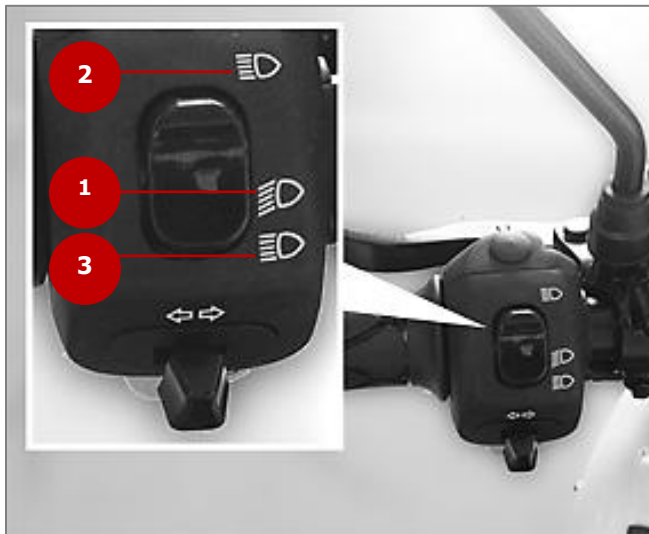

Front light – The front light can vary according to the position of this switch in the following way:

1-Position light – It will automatically be on when you switch on your scooter. (There is not off option).

2-Full beam – It improves visibility in rainy/cloudy days or very dark roads. To activate it press the black button up but consider traffic rules and conditions before using it.

3-Flashes – These flashes are useful to notify or give signals to other drivers and are activated by repeatedly pressing the switch down. The button returns automatically to the rest position (position light) when it is not pressed



Directional Lights– Switch to sign a turn or lane change. Slide the switch in the direction you want to go (right/left) before the action to notify other drivers of your intention. To cancel the light press

the button and the corresponding signal in the dashboard will disappear.



Claxon – Use it to alert other drivers. It is activated by pressing the button.

REMEMBER: The Horn is an instrument of notice that must be used according to the circulations

rules and codes.